



	Code	Description	Dimensions (cm)	Weight (kg)
1	56125	Wham Essentials 32cm Roaster	32 x 25.5 x 4 (Ext.)	0.236
2	56000	Wham Essentials 39cm Roaster	38.5 x 31 x 4 (Ext.)	0.342
3	56025	Wham Essentials 32cm Baking Tray	32 x 23 x 1.5 (Ext.)	0.215
4	56300	Wham Essentials Deep Oven Tray	30.5 x 19 x 3.5 (Ext.)	0.194
5	56150	Wham Essentials 36cm Baking Tray	36 x 25 x 2 (Ext.)	0.251
6	56250	Wham Essentials Square Sandwich Tin	19 x 19 x 3 (Int.)	0.146
7	56100	Wham Essentials 26cm Roaster	25.5 x 20.5 x 3.5 (Ext.)	0.159
8	56075	Wham Essentials 12 Cup Bunsheet	31.5 x 24 x 1.5 (Ext.)	0.212
9	56225	Wham Essentials 12 Cup Muffin Tin	35.5 x 26.5 x 3 (Ext.)	0.207
10	56050	Wham Essentials 18cm Sandwich Tin	18.5 x 18.5 x 2.5 (Int.)	0.111
11	56325	Wham Essentials 22cm Springform	22.5 x 22.5 x 6.5 (Int.)	0.282
12	56275	Wham Essentials 2lb Loaf Tin	21.5 x 11 x 5.5 (Int.)	0.127
13	56175	Wham Essentials Yorkshire Pudding Tray	23.5 x 23.5 x 2 (Ext.)	0.16
14	56350	Wham Essentials Pizza Tray	33 x 33 x 1.5 (Ext.)	0.22
15	56200	Wham Essentials 6 Cup Muffin Tin	26.5 x 18.5 x 3 (Int.)	0.394



17



16



22



18



19



20



21

	Code	Description	Dimensions (cm)	Weight (kg)	
	16	56775	Wham Essentials 32cm Crisper Tray	31.5 x 31.5 x 1.5	0.2951
	17	56650	Wham Essentials 20cm Springform	20.5 x 20.5 x 6.5	0.2505
	18	56675	Wham Essentials 24cm Springform	24.5 x 24.5 x 6.5	0.3182
	19	56400	Wham Essentials 6" Loose Bottom Cake Tin	16 x 16 x 9	0.1876
	20	56425	Wham Essentials 7" Loose Bottom Cake Tin	19 x 19 x 9	TBC
	21	56450	Wham Essentials 8" Loose Bottom Cake Tin	21.5 x 21.5 x 9	TBC
	22	56750	Wham Essentials 39cm Baking Tray	31 x 39 x 1.5	0.3729