

## “Push pan” Care and use text

6<sup>th</sup> oct

1. Remove all packaging and wash the cake pan before first use.
2. Insert the base, ensuring that the non-stick surface is facing inside the pan and the coloured surface is facing downwards and towards the outside of the pan. Gently push all the way down until it fits evenly in the bottom of the pan.
3. Grease the PushPan® if the recipe requires – unsalted butter is best.
4. Always allow baking to cool before attempting to push it out.
5. To “push” baked item out of pan: -
  - a. Place the PushPan® on a tall, smaller sized article such as a tin can or small mixing bowl that is taller than the PushPan®.
  - b. Make sure it is stable, will not topple over and strong enough to press down on. Do not use an item made of glass!
  - c. Holding the top edge of the PushPan® with both hands on opposite sides of the pan, gently push the pan steadily down and watch your cake gently rise from the pan.
6. PushPan® is dishwasher safe, though we recommend washing by hand with a mild detergent.
7. PushPan® is safe for use in the refrigerator and freezer.
8. Do not try to remove the seal from the base, you do not need to remove the seal for cleaning and any attempt to do so may damage the seal and affect the future performance of your pan. Any attempt to remove the seal will void your guarantee.
9. Always ensure the PushPan® is thoroughly dry before storing.
10. Maximum oven temperature is 230°C / 450°F. Do not use on stove top, open flame, microwave or under a grill/broiler.  
Do not use in a microwave.